

Republic of Turkey  
EGE UNIVERSITY FACULTY OF SCIENCE  
EGEMİKAL HEALTH ENVIRONMENT LABORATORY  
35100 Bornova-IZMIR/TURKEY  
Phone : +90 232 3115020, Fax : +90 232 3115021

**MICROBIOLOGICAL EFFICACY ANALYSIS REPORT**

Number: 38670653/324

Bornova-Izmir

Subject: Analysis

20.11.2020

<b>Report Registration Number</b>	BP200157-1
<b>Full name of product</b>	Neffes 1000 U HAVA TEMİZLEME CİHAZI (NFS 1000 U)
<b>Owner of the Licence/product</b>	Form Endüstri Tesisleri Sanayi A.Ş.
<b>Product Type</b>	Biocidal products without active substances
<b>Area of use</b>	Air Disinfection
<b>Properties of Cabin (Size, UV lamp count)</b>	It is specified in the scheme in Annex-1 of the cabinet. (Number of lamps: 2)
<b>Properties of UV lamp</b>	2 Uv-C lamps, 2x25 watts
<b>Size of Aerosols</b>	4-10 µm
<b>Temperature-humidity</b>	24 °C-50 %
<b>Application time</b>	15 and 30 minutes
<b>Start and end date of Analyses</b>	14.10.2020-28.10.2020
<b>Evaluation</b>	Neffes 1000 U HAVA TEMİZLEME CİHAZI (NFS 1000 U) achieved > 4 log reduction at the specified test conditions over 30 minutes, 6.07 for <i>Serratia marcescens</i> ATCC 14756.

Analyst  
Dr. Ash SAHİNER  


Chief of Microbiology Laboratory  
Prof. Dr. Mustafa ATEŞ  


**MICROBIOLOGICAL EFFICACY ANALYSIS REPORT****MICROBIOLOGICAL TEST RESULTS**

METHOD	GB 21551-3, 2009; ASHRAE, 2014a; ISO 15714, 2019
AIR SAMPLING METHOD	Active air sampling /Merck MAS 100
PLATE COUNT METHOD	Air sampling method and pour plate technique
TEST ORGANISMS	<i>Serratia marcescens</i> ATCC 14756
INCUBATION TEMPERATURE AND TIME	32 °C (±1), 24-48 hours
MEDIUM USED IN TEST	Nutrient Agar
SUMMARY OF THE METHOD	<p>Suspension of 18-20 hours test organisms was prepared according to McFarland No: 2 (<math>6.0 \times 10^8</math> cfu / ml). This suspension was sprayed in the form of aerosol of 4-10 <math>\mu</math>m into the test cabin where the tested device was located. In order to determine the amount of bacteria decreasing spontaneously, air samples were taken in 15-minute periods with the air sampling device to the petri dishes containing the medium (Control trial). Before the device was started (0 minutes) and after the device was started, air samples were taken back to the petri dishes with the air sampling device at periods in accordance with the technical specifications of the device. Colonies were counted after the petri dishes were incubated at <math>32 \pm 1^\circ\text{C}</math> for 24-48 hours. Time dependent calculation obtained in control trials is given in the table "Before UVC Application". Here, the spontaneous reductions obtained depending on the time were subtracted from the logarithmic reduction value obtained after UVC application.</p> <p>Spontaneous reduction (<math>\log R_k</math>) = Control Test bacterial count at 0 min (<math>\log N_{k0}</math>) – Control test t. bacterial count per minute (<math>\log N_{kt}</math>)</p> <p>Amount of reduction (<math>\log R</math>) = [0. Bacterial count per minute (<math>\log N_0</math>) - Spontaneous reduction (<math>\log R_k</math>)] - Bacteria count after application (<math>\log N_t</math>)</p>



Analyst

**Dr. Ash ŞAHİNER****Chief of Microbiology Laboratory**  
**Prof. Dr. Mustafa ATEŞ**

**MICROBIOLOGICAL EFFICACY ANALYSIS REPORT**

Test Organism ( <i>Serratia marcescens</i> ATCC 14756)			
Before UVC Application			
Time (min)	Colony count (cfu/m <sup>3</sup> )	Log	Spontaneous reduction according to initial concentration (LogR <sub>k</sub> )
0	3.4 x 10 <sup>7</sup>	7.53	-
15	9.2 x 10 <sup>6</sup>	6.96	0.57
30	5.2 x 10 <sup>6</sup>	6.72	0.81
After UVC Application			
Time (min)	Colony count (cfu/m <sup>3</sup> )	LogN <sub>t</sub>	LogR
0	1.5 x 10 <sup>8</sup>	8.18 (LogN <sub>0</sub> )	-
15	1.1 x 10 <sup>5</sup>	5.03	2.58
30	<20	<1.30	> 6.07



  
Analyst  
**Dr. Aslı ŞAHİNER**

  
Chief of Microbiology Laboratory  
**Prof. Dr. Mustafa ATEŞ**



**MICROBIOLOGICAL EFFICACY ANALYSIS REPORT**

**Annex 1: Scheme and dimensions of the cabinet**

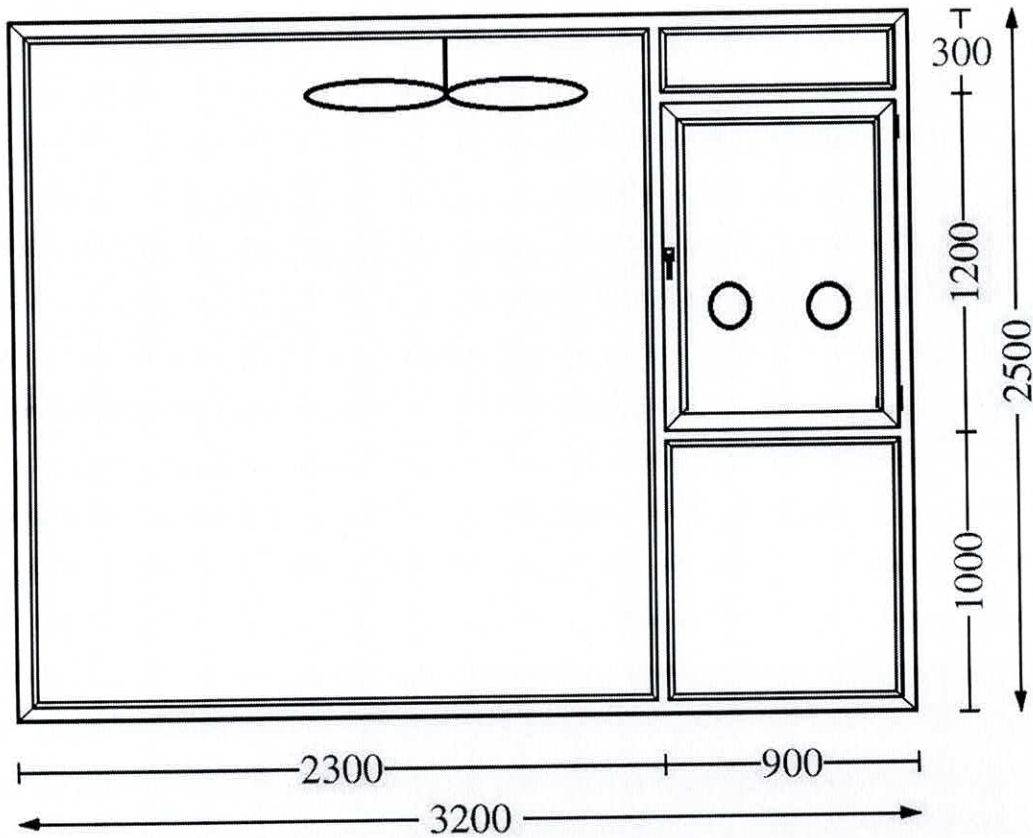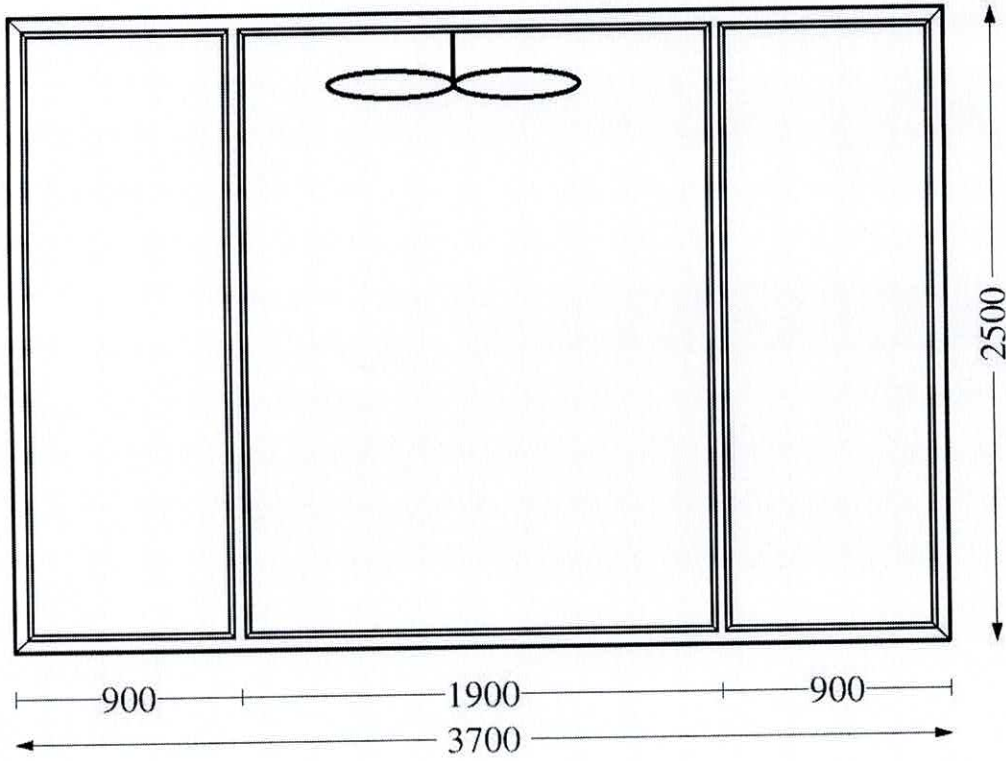

**MICROBIOLOGICAL EFFICACY ANALYSIS REPORT****NOTE:**

1. This report includes only results of delivered samples.
2. Test results cannot be used for commercial purposes on TV or in press.
3. This report shall not be copied or transmitted without the written permission of the laboratory.
4. This report is not valid without signature.
5. We shall not be held responsible for the determination of test items and operation of the sampling procedure.



**EGEMİKAL Chairman**  
Prof. Dr. Güven ÖZDEMİR



**Analyst**  
Dr. Aslı ŞAHİNER



**Chief of Microbiology Laboratory**  
Prof. Dr. Mustafa ATEŞ